

### WHAT'S INCLUDED:



### YOU ALSO NEED THE FOLLOWING (NOT INCLUDED IN THE KIT):

- Monitor
- HDMI cable
- Keyboard
- Mouse
- Ethernet cable (optional)



### WHAT'S INSTALLED:

- Intel® Media SDK
- Intel® Distribution of OpenVINO Toolkit

### LEARN MORE ABOUT THE KIT AND GET STARTED

<https://www.ieiworld.com/flex-bx210ai/>



<https://software.intel.com/content/www/us/en/develop/topics/iot/hardware/10th-gen-core-dev-kit.html>



# FLEX Accelerate to the Future

## IEI FLEX AIoT Developer Kit Quick Start Guide



Copyright© 2021 IEI. All rights reserved. Specifications are subject to change without notice. Intel® and the Intel logo are trademarks of Intel® Corporation or its subsidiaries in the U.S. and/or other countries. Other brands and product names are trademarks or registered trademarks of their respective holder.

**⚠ Important: Read all of the instructions carefully**

**1 Connect your system using Ethernet or Wi-Fi**

The FLEX system is equipped with Ethernet and Wi-Fi capabilities.



**Connect using Wi-Fi**

To install the Wi-Fi antenna, screw each antenna onto the gold knobs on the back of the FLEX system. To begin using the internet, connect to your wireless network and select the desired SSID.

OR


**Connect using Ethernet**

Plug the Ethernet cable into your system, and then plug the other end of the cable into the router.

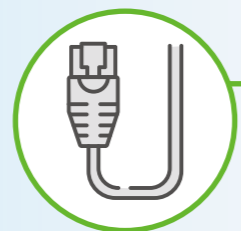
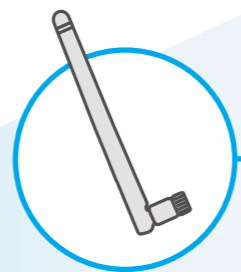


**2 Connect the HDMI or DisplayPort devices**


Plug in the HDMI connector or DisplayPort in the right direction as shown below.

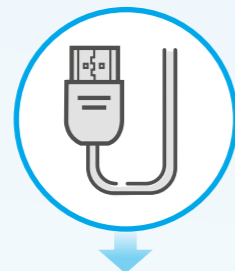


OR

 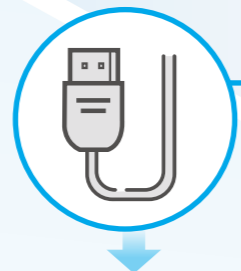

HDMI

 

DisplayPort

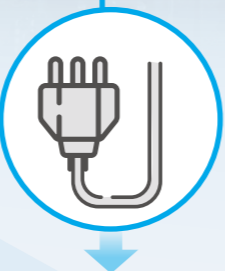

AC Plug

**3 Plug in all cords**



Keyboard



Mouse



**4 Turn on**

Until the LED lights up in blue 



Turn on

**5 Log in**

Log in with the default user name and password.

Username:

Password:

**6 Continue here:**

<https://software.intel.com/content/www/us/en/develop/articles/iot-devkit-gsg.html>

